

Direction-Control Valve (solenoid operation)

■Sub-plate

- Mainly for solenoid valves. Those directly connected to the pump and for piping are available.
- When sub-plates (MPS-31/R-43-BP/R-44P) are mounted to the pump, connecting pipes and O-rings are required separately.

■Specification

Type	Compatible valve	Pumps that can be mounted directly	Connection diameter (Rc)		Approximate weight kg
			A, B, P, T	PP	
MPS-31	M series equipment/solenoid valves	MP-5, 6, 12, 12H, 15H	3/8	-	4.0
R-43-BP	SOL-R-4 SOW-R-4	The above and MP-17H	1/2 (Note 1)	-	
R-44-P			1/2	-	
R-44-BP			3/4	-	
R-46-BP	SOW-R-46	For piping	3/4	3/8	17.0
R-48-BP	SOW-R-48		1	3/8	31.0

(Note 1) The bottom T port is Rc3/8.
 ※See P. 140 for the details of MPS-31.

Hydraulic Valves

